




SPKRSW-X

Ver. 1 Rel. 5/18/2018

SPEAKER SWITCH BOARD

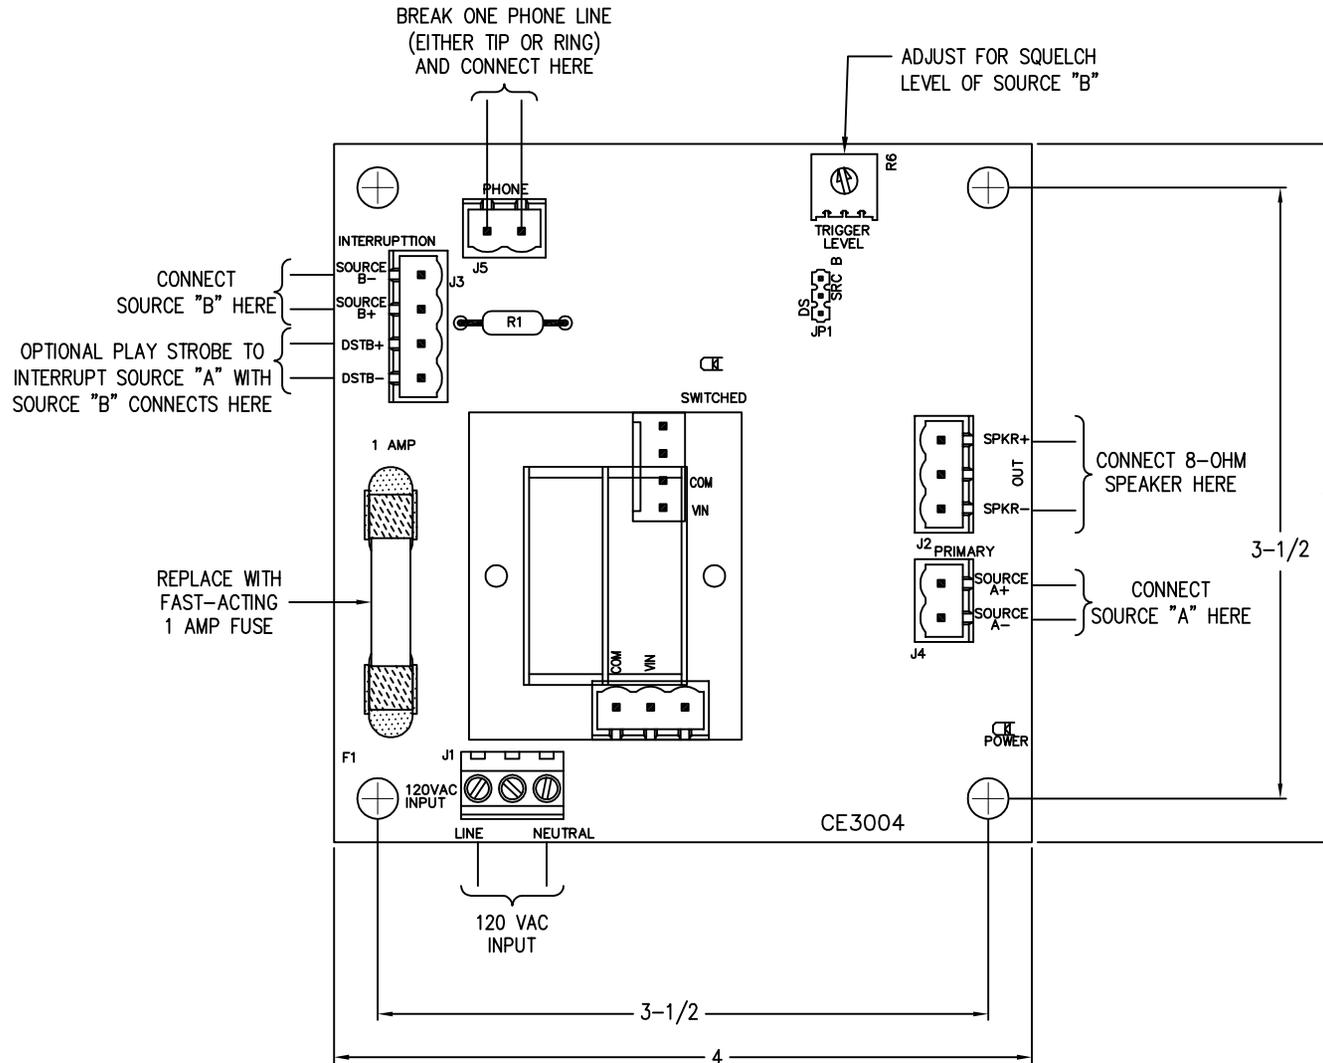

The speaker switch board allows for the use of and I/O source to be switched. The continuous audio source "A" is interrupted by the "B" audio source. Typical uses are with voice annunciator, intercom, and elevator music.

NOTE:

Source "A" is the audio signal which normally plays continuously and is the signal to be interrupted.

Source "B" is the audio signal which is to be played upon interruption either by its presence or upon door strobe activation. This interruption mode is determined by the JP1 jumper setting.

TO ORDER - SPECIFY SPKRSW-X; 120 VAC

- 1; Micro Comm
- 2; RSL Serial Link