



MNOISE-XXXX

JOB# _____

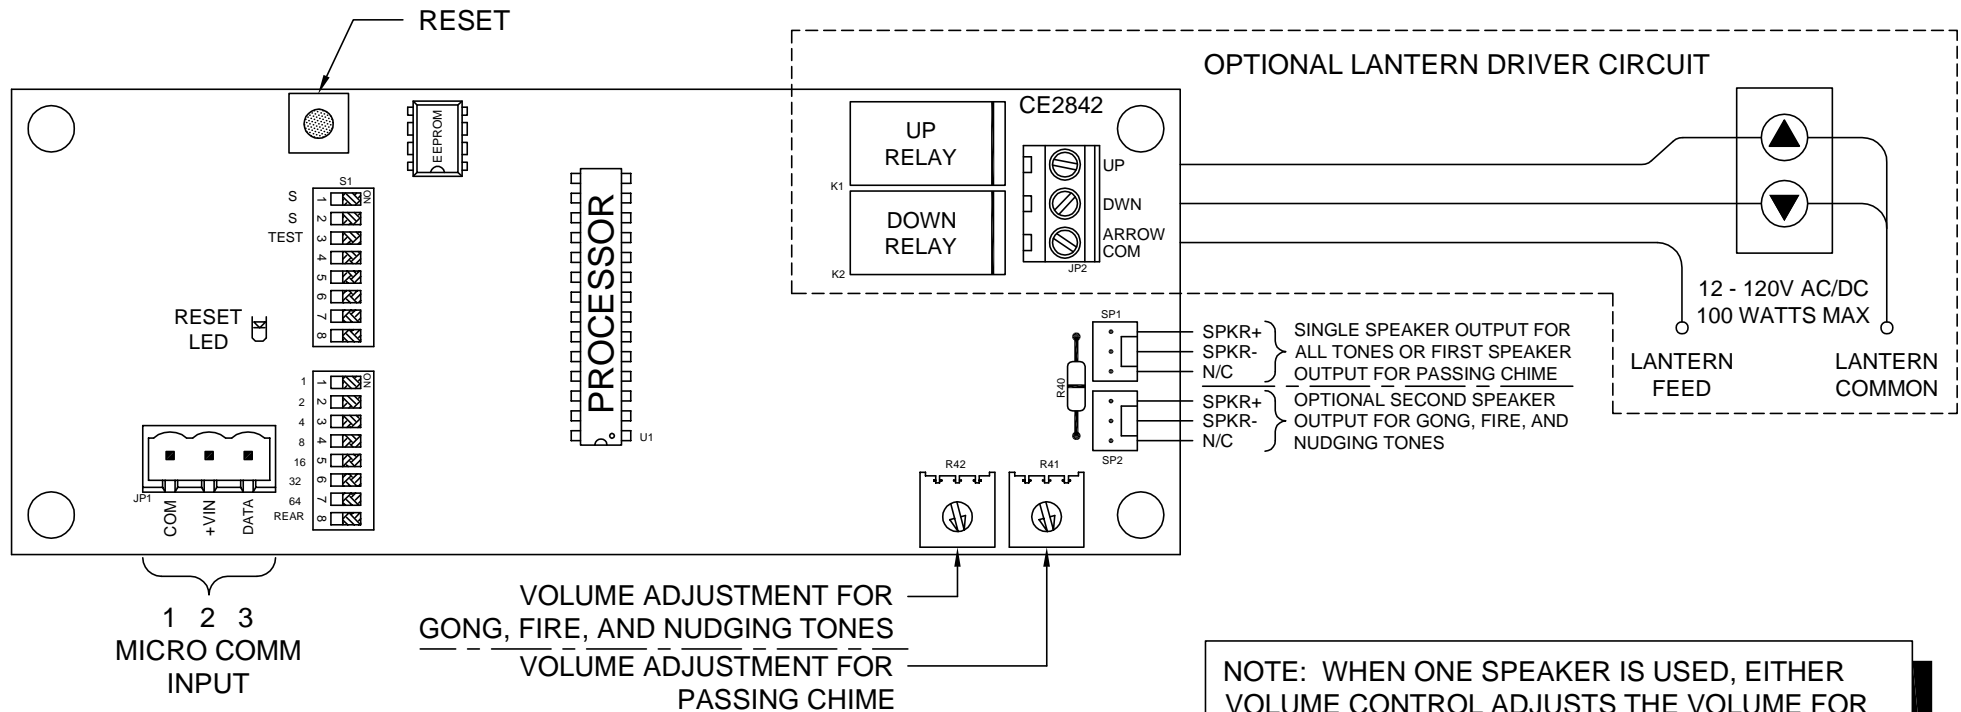


NOTE: WHEN ONE SPEAKER IS USED, EITHER VOLUME CONTROL ADJUSTS THE VOLUME FOR ALL TONES. WHEN USING TWO SPEAKERS, R6 IS REMOVED AND EACH SPEAKER IS CONTROLLED INDEPENDENTLY AS NOTED AT LEFT.

S1 DIP SWITCH DETAIL




SELF-TEST
SELF-TEST
OP MODE
NOT USED

DEFAULT SETTINGS

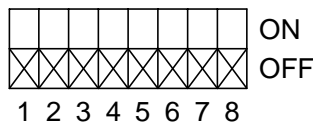


S2 DIP SWITCH DETAIL



1 2 3 4 8 16 32 REAR
FLOOR ADDRESS
NOT USED

DEFAULT SETTINGS

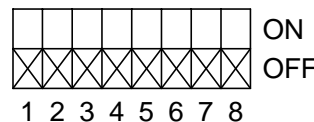

*** FEATURES INCLUDED ON THIS UNIT ***

- HANDICAP GONG ☐
- NUDGING BUZZER ☐
- FIRE ALARM ☐
- PASSING CHIME ☐

CODE VERSION _____

BOARD VERSION CE2842 _____

*** DIP SWITCH FUNCTIONS ARE EXPLAINED ON THE BACK SIDE OF THIS DIAGRAM. ***

DATE DRAWN: 12/10/08	DRAWN BY: DAC	REQUESTED BY: MW	C.E. ELECTRONICS, INC. 2107 Industrial Drive Bryan, Ohio 43506 (419) 636-6705
BOARD NUMBER: 2842C and up	LAST DATE REVISED: 05/26/09	APPROVED BY:	
PRODUCT MNOISE	DWG. NO. MNOIS006	REV. A	

FLOOR ADDRESS CHART

SET THE DIP SWITCHES ON S2 AS SHOWN IN THE CHART BELOW TO TRIGGER THE PROPER DIRECTION LANTERN AND AUDIO SIGNALS AT THE DESIRED FLOOR LEVEL.

DS6	DS5	DS4	DS3	DS2	DS1	FLOOR
0	0	0	0	0	0	① ALL CALL
0	0	0	0	0	1	FLOOR 1
0	0	0	0	1	0	FLOOR 2
0	0	0	0	1	1	FLOOR 3
0	0	0	1	0	0	FLOOR 4
0	0	0	1	0	1	FLOOR 5
0	0	0	1	1	0	FLOOR 6
0	0	0	1	1	1	FLOOR 7
0	0	1	0	0	0	FLOOR 8
0	0	1	0	0	1	FLOOR 9
0	0	1	0	1	0	FLOOR 10
0	0	1	0	1	1	FLOOR 11
0	0	1	1	0	0	FLOOR 12
0	0	1	1	0	1	FLOOR 13
0	0	1	1	1	0	FLOOR 14
0	0	1	1	1	1	FLOOR 15
0	1	0	0	0	0	FLOOR 16
0	1	0	0	0	1	FLOOR 17
0	1	0	0	1	0	FLOOR 18
0	1	0	0	1	1	FLOOR 19
0	1	0	1	0	0	FLOOR 20
0	1	0	1	0	1	FLOOR 21
0	1	0	1	1	0	FLOOR 22
0	1	0	1	1	1	FLOOR 23
0	1	1	0	0	0	FLOOR 24
0	1	1	0	0	1	FLOOR 25
0	1	1	0	1	0	FLOOR 26
0	1	1	0	1	1	FLOOR 27
0	1	1	1	0	0	FLOOR 28
0	1	1	1	0	1	FLOOR 29
0	1	1	1	1	0	FLOOR 30
0	1	1	1	1	1	FLOOR 31

DS6	DS5	DS4	DS3	DS2	DS1	FLOOR
1	0	0	0	0	0	FLOOR 32
1	0	0	0	0	1	FLOOR 33
1	0	0	0	1	0	FLOOR 34
1	0	0	0	1	1	FLOOR 35
1	0	0	1	0	0	FLOOR 36
1	0	0	1	0	1	FLOOR 37
1	0	0	1	1	0	FLOOR 38
1	0	0	1	1	1	FLOOR 39
1	0	1	0	0	0	FLOOR 40
1	0	1	0	0	1	FLOOR 41
1	0	1	0	1	0	FLOOR 42
1	0	1	0	1	1	FLOOR 43
1	0	1	1	0	0	FLOOR 44
1	0	1	1	0	1	FLOOR 45
1	0	1	1	1	0	FLOOR 46
1	0	1	1	1	1	FLOOR 47
1	1	0	0	0	0	FLOOR 48
1	1	0	0	0	1	FLOOR 49
1	1	0	0	1	0	FLOOR 50
1	1	0	0	1	1	FLOOR 51
1	1	0	1	0	0	FLOOR 52
1	1	0	1	0	1	FLOOR 53
1	1	0	1	1	0	FLOOR 54
1	1	0	1	1	1	FLOOR 55
1	1	1	0	0	0	FLOOR 56
1	1	1	0	0	1	FLOOR 57
1	1	1	0	1	0	FLOOR 58
1	1	1	0	1	1	FLOOR 59
1	1	1	1	0	0	FLOOR 60
1	1	1	1	0	1	FLOOR 61
1	1	1	1	1	0	FLOOR 62
1	1	1	1	1	1	FLOOR 63


NOTE 1: TO USE THE MNOISE AS A CAR-RIDING UNIT, SET DIP SWITCHES 1-7 TO OFF.

OPERATION MODE CHART

SET THE DIP SWITCHES ON S1 AS SHOWN IN THE CHART BELOW TO SET THE MNOISE FOR RUN MODE OR TO TEST THE AUDIO SIGNALS.

DS3	DS2	DS1	OPERATING MODE
0	X	X	RUN MODE
1	0	0	TEST MODE - - PASSING CHIME
1	0	1	TEST MODE - - HANDICAP GONG
1	1	0	TEST MODE - - FIRE ALARM
1	1	1	TEST MODE - - NUDGING BUZZER

S2 - DS8 (REAR): WHEN SET TO ON, THE HANDICAP GONG WILL ONLY SOUND WHEN IT RECEIVES A REAR ARRIVAL SIGNAL FROM THE CONTROLLER.

DATE DRAWN: 02/14/03	DRAWN BY: DAC	REQUESTED BY: MW	 C.E. ELECTRONICS, INC. 2107 Industrial Drive Bryan, Ohio 43506 (419) 636-6705
BOARD NUMBER: 2842	LAST DATE REVISED: 12/09/08	APPROVED BY:	
PRODUCT MNOISE DIP SWITCH CHARTS			
DWG. NO. MNOIS005			REV. D